

# USE AND CARE INSTRUCTIONS

PLEASE READ USE AND CARE INSTRUCTIONS IN ITS ENTIRETY PRIOR TO SETTING UP AND OPERATING YOUR CROSLEY PRODUCT

*Note: As with any electronics maintenance, always unplug the unit from the power outlet to prevent the risk of electrical shock.*

## ROUTINE MAINTENANCE

### Needles

>Needles can last up to a 1000 hours depending on the condition of the records. We recommend cleaning your needle by using compressed air or a stylus brush to remove dust and debris as needed.

>Replacement needles can be purchased at [www.crosleyradio.co.za](http://www.crosleyradio.co.za) or by contacting our Customer Service Team at 063-409-2794 and [sales@crosleyradio.co.za](mailto:sales@crosleyradio.co.za).

> Instructions on how to properly install needles are available at [www.crosleyradio.com/support](http://www.crosleyradio.com/support) under the heading 'Need a Visual?'

### Belts

>Wobble, sway, or speed related issues are generally caused by a worn or old belt.

>Replacement belts can be purchased by contacting our Customer Service Team at 063-409-2794 and [sales@crosleyradio.co.za](mailto:sales@crosleyradio.co.za).

>Instructions on how to properly install belts are available on our website at [www.crosleyradio.com/support](http://www.crosleyradio.com/support) under the heading 'Need a Visual?'

NOTE: Needles and belts are consumable items that will need to be replaced as part of the regular care and maintenance of the product.

### Tape Deck

>Static and hissing on the playback of the cassette are generally caused by a dirty tape deck. We recommend cleaning tape deck assembly at least once every 20 hours of use.

### CD/Record Players

>Skipping related issues are generally caused by a dirty CD player. We recommend cleaning CD/Recorder assemblies using a CD lens cleaning kit once a year depending on actual usage of the unit.

### Wood/Veneer Cabinetry

>Dust frequently with a clean, soft, dry, lint-free cloth. Wipe the surface in the direction of the grain to remove dirt and fingerprints. We recommend polishing with Guardsman Furniture Polish© or any furniture polish. We do not recommend the use of aerosol-powered cleaners, polishes that contain silicone, waxes, abrasives, or are oil based.

### ABS Composite Plastic/Vinyl Cabinetry

- Dust frequently with a clean, soft, dry, lint-free cloth. Clean the unit with a slightly damp cloth and mild detergent. Rinse cloth in clear water and wring out, then wipe again to remove detergent residue. To prevent damage use a dry cloth to wipe excess moisture.

### Storage

- Store in a cool and dry location.
- Lock the tone arm using the latch on the tone arm rest.
- Keep all accessories with the unit i.e. manual, power adapters, etc.
- Do not stack anything on top of the unit. Crosley offers a product line of various cleaning accessories.

*Please visit our website at [www.crosleyradio.co.za](http://www.crosleyradio.co.za) for more information. As products are improved and new products are released, our Use and Care Instructions are regularly updated.*